

ATI Mini40 DAQ F/T sensor information and tips

Iris David Du Mutel

September 5, 2023

Contents

1	What kind of sensor is the ATI Mini40 DAQ F/T?	1
1.1	Load calculation	2
2	Wiring and connecting to a DAQ	2
2.1	Sampling	2
2.2	Range	3
2.3	Resolution	4
2.4	Sensitivity and output range and resolution voltages	5
3	SICK WLA16 Photoelectric sensors	5
3.0.1	Codes files	7
3.1	On Timers and interrupts	7
3.2	On only interrupt based algorithms (FINAL CHOICE)	9
4	Castle Phoenix Edge 50A ESC	10
5	Keysight 34970A connection to PC	11
5.1	Important commands	11
6	LabView	13
6.1	Keysight 34970A	13
6.2	NI USB 6008	14
7	Python	14
7.1	Keysight 34790A	14
7.2	NI USB 6008 DAQ	14
8	The final architecture	16
8.1	Data collection procedure	16
9	Resources	16

Abstract

This document is meant to be a summary of all the relevant information found while working with the ATI Mini40 DAQ F/T sensor. It contains all the information and instructions to operate such sensor in various environments such as LabView, Python and MATLAB using the Keysight 34970A Data Acquisition Unit and the NI USB 6008 DAQ.

This document is also a description of the files contained in this project.

1 What kind of sensor is the ATI Mini40 DAQ F/T?

The transducer is a compact, durable, monolithic structure that converts force and torque into analog strain gauge signals. The force applied to the transducer flexes three symmetrically placed beams using

Hooke's law (from page 16 of the manual 9620-05-DAQ):

- $s = E \cdot e$
- $s =$ Stress applied to the beam (s is proportional to force)
- $E =$ Elasticity modulus of the beam
- $e =$ Strain applied to the beam

Semiconductor strain gauges are attached to the beams and act as strain-sensitive resistors. The resistance of the strain gauge changes as a function of the applied strain as follows:

- $\Delta R = S_a \cdot R_0 \cdot e$
- $\Delta R =$ Change in resistance of strain gauge
- $S_a =$ gauge factor of strain gauge
- $R_0 =$ Resistance of strain gauge unstrained
- $e =$ Strain applied to strain gauge

1.1 Load calculation

From page 18 of the manual:

Additionally to this, gain correction factor is only required when a customer amplifier is being used. Refer to page 20 of the manual for more information.

2 Wiring and connecting to a DAQ

There are two different wiring alternatives for the DAQ version of this sensor:

- Differential connections to DAQ (Figure 2)
- Single-ended connections to DAQ(Figure 3)

A connection from the DAQ F/T's AGnd/AIGnd line to the data acquisition system's analog input ground or analog ground is required in most cases. This line allows the return of the small amount of current used by the data acquisition system. Noise can result if this current isn't returned via the AGnd/AIGnd path. For best noise performance, the cabling from the PS/IPFS connector should be shielded and each strain gauge's signals in a twisted pair. The shielding should be connected to the PS/IPFS connector shell and to the shell of the data acquisition system's connector. If the data acquisition system has no connector or its connector shell is electrically floating, then the shield at the PS/IPFS connector should be connected to the AGnd/AIGnd signal.

2.1 Sampling

For best performance in all applications (page 37 from 9620-05-DAQ), the transducer electronics have bandwidth of 5kHz to 10kHz (depending on gain settings). This allows collection of all transducer frequency content. Note: that to satisfy the Nyquist Theorem, the data needs to be coupled at a rate greater than twice the highest frequency present, even if data at that frequency is not preferred. The forces and torques will be sampled at that frequency, not having anything to do with the sampling rate of the data acquisition unit.

The data acquisition unit on the other hand has a maximum aperture time of $400\mu s$, meaning that's the smallest amount of time it needs for opening and reading from one channel. This aperture time is equivalent to an integration time of 0.02 PLC. The relationship between this two parameters is the following:

$$\frac{0.02PLC}{50Hz(instrumentpowerfrequency)} = 400\mu s \quad (1)$$

Figure 3.4—FT Matrix Calculations

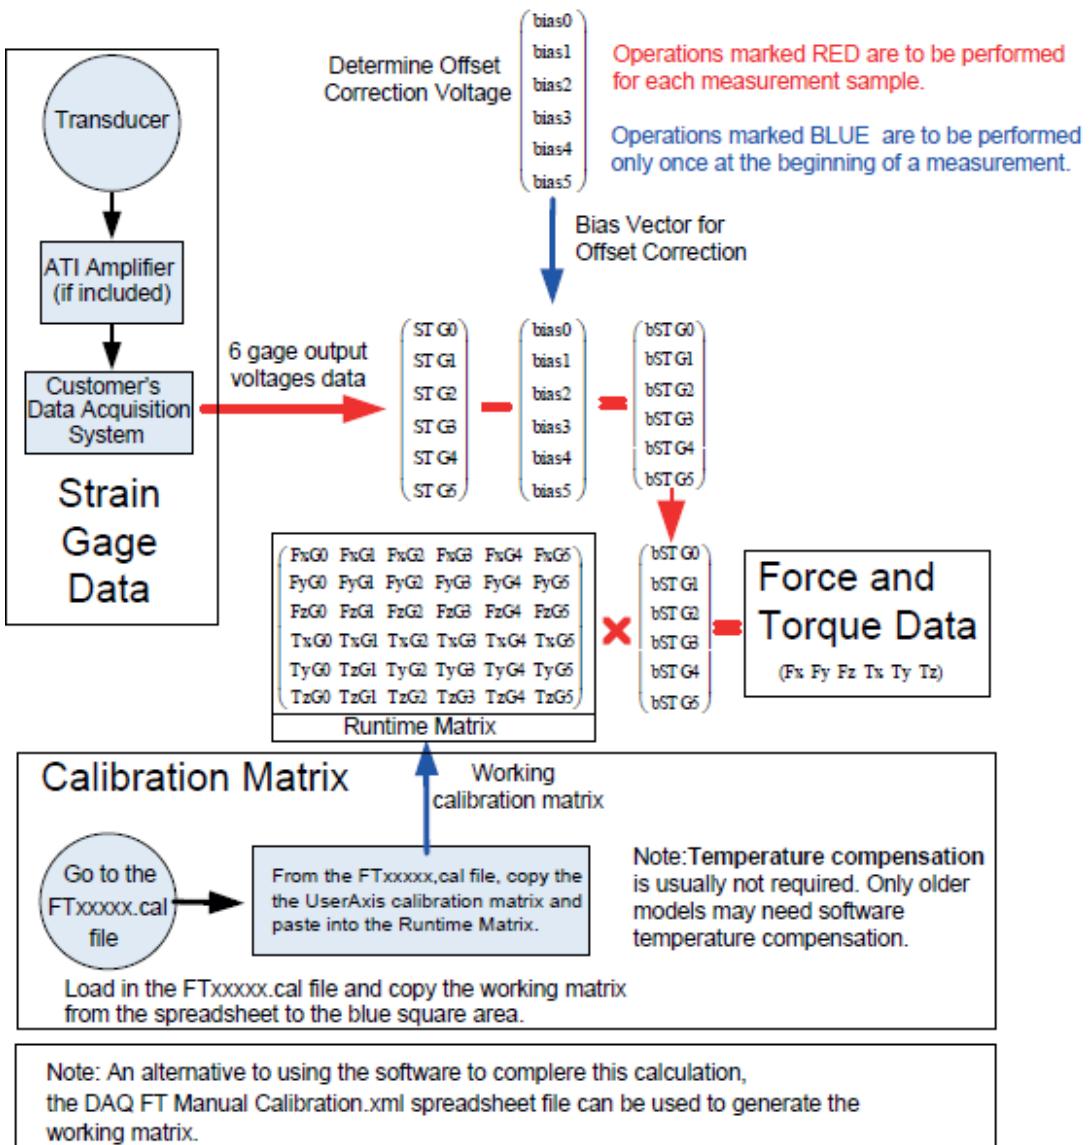


Figure 1: Load calculation process

Using a differential wiring with 12 channels, we will need to multiply that aperture time by the number of channels:

$$400\mu s \cdot 12 = 4800\mu s \quad (2)$$

An aperture time of 4.8 ms is equivalent to a frequency of around 208 Hz. Rounding the aperture time to 5 ms per data volume (a vector containing one voltage value for each channel), we can obtain 10 measurements every 50 ms.

2.2 Range

As specified in the ATI site, the range of the sensor for the calibration US-20-40 is the following defined as the average of the worst and best case scenarios:

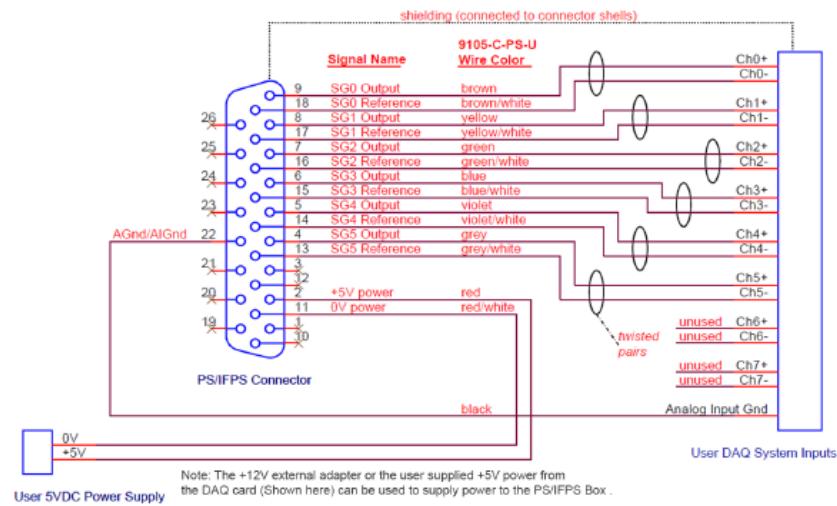


Figure 2: Differential wiring connections to data acquisition system (page 35 from 9620-05-DAQ)

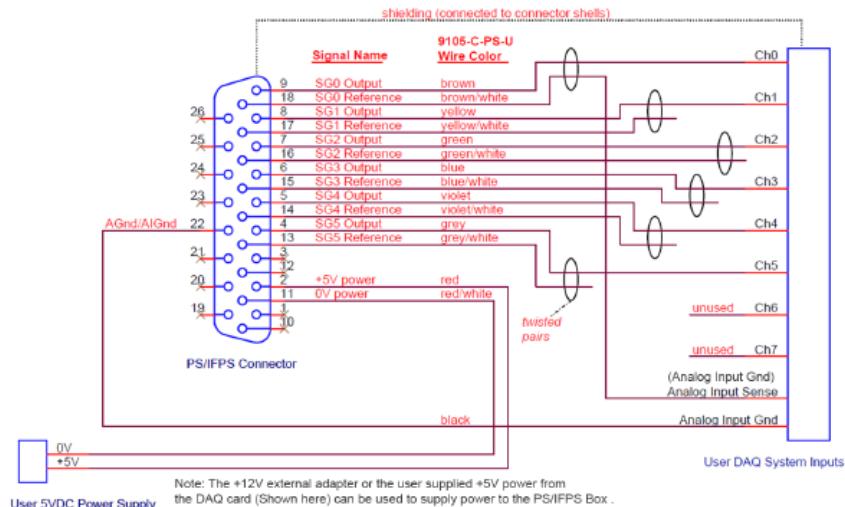


Figure 3: Single-ended wiring connections to data acquisition system (page 36 from 9620-05-DAQ)

Table 1: Range values in imperial and metric systems

Fx, Fy	Fz	Tx,Ty	Tz
± 20 lbf	± 60 lbf	± 40 lbf-in	± 40 lbf-in
± 88.9644 N	± 266.893 N	± 4.51939 N·m	± 4.51939 N·m

2.3 Resolution

As specified in the ATI site, the resolution of the sensor for the calibration US-20-40 is the following defined as the average of the worst and best case scenarios:

Table 2: Resolution values in imperial and metric systems

Fx, Fy	Fz	Tx,Ty	Tz
1/200 lbf	1/100 lbf	1/200 lbf-in	1/200 lbf-in
0.022241108 N	0.0444822 N	0.000564924 N-m	0.000564924 N-m

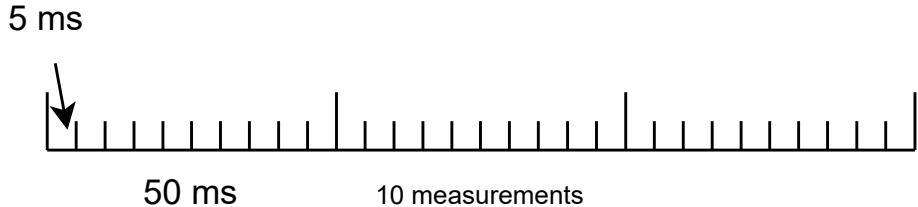


Figure 4: Representation of trigger timer of 50 ms and 10 scans of

2.4 Sensitivity and output range and resolution voltages

From page 54 of the transducer manual, we can obtain the analog ± 10 V sensitivity. Using the data from tables 1 and 2, we can obtain the following table:

Table 3: Sensitivity, range and resolution outputs voltages (imperial system)

	Fx, Fy	Fz	Tx,Ty,Tz
Analog ± 10 V sensitivity	2 lbf/V	6 lbf/V	4 lbf-in/V
Range [V]	± 10	± 10	± 10
Resolution [V]	1/400	1/600	1/800

The minimum voltage that the DAQ must be able to measure is $1/800$ V = 1.25 mV. The range must be ± 10 V.

Just for clarity purposes, Table 3 in metric system would be as follows:

Table 4: Sensitivity, range and resolution outputs voltages (metric system)

	Fx, Fy	Fz	Tx,Ty,Tz
Analog ± 10 V sensitivity	8.89644 N/V	26.6893 N/V	17.7929 N/V
Range [V]	± 10	± 10	± 10
Resolution [V]	1/400	1/600	1/800

3 SICK WLA16 Photoelectric sensors

The SICK photoelectric sensors have been chosen for this application as they have proven their applicability in UAV related research topics in the past [1]. It has to be powered with 10 V to 20 V. For more specifications regarding the power of the sensor, see the manual.

The connection type is as in Figure 5:



Figure 5: SICK WLA16 Photoelectric sensors pinout

These sensors have four cables which have the following functionality:

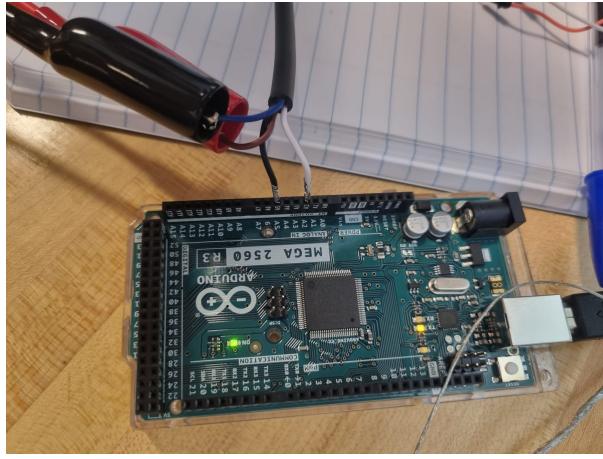


Figure 6: SICK sensor analog connection to arduino mega 2560 R3

- Brown (pin 1): Positive power input.
- White (pin 2): Digital output. When an object is present between the sensor and the reflector, the signal is high. If not, signal is low.
- Blue (pin 3): GND
- Black (pin 4): Digital output. When an object is present between the sensor and the reflector, the signal is low. If not, signal is high.

The arduino connection to be used with the *sensor_analog.ino* script are as in Figure 6:

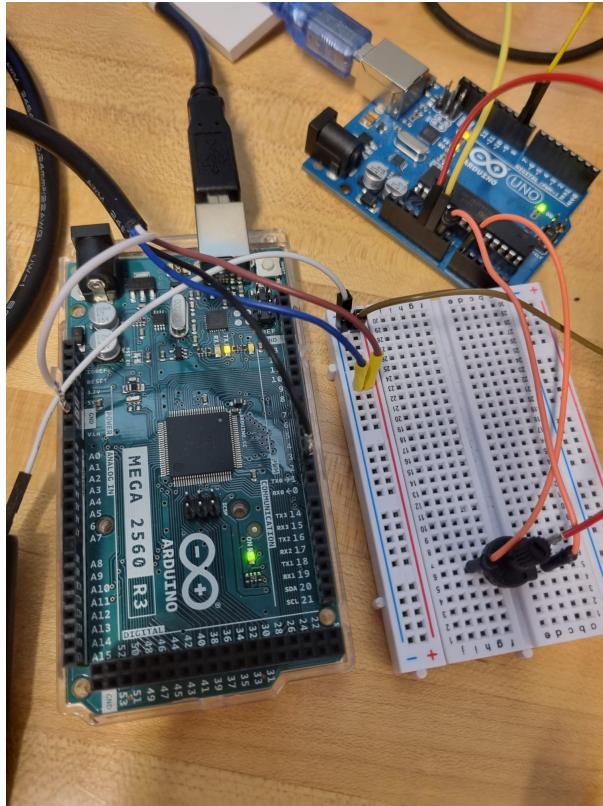


Figure 7: SICK sensor digital connection to arduino mega 2560 R3

Specifications of these sensors can be found in this table:

Table 5: SICK WLA16 Photoelectric sensor specifications: digital output

Output number	2 (black and white pins)
Signal voltage High-Low (V)	$U_B - 2.5V / 0$ (PNP) and $U_B / < 2.5 V$ (NPN)
Output current	≤ 100 mA
Switching frequency	1000 Hz
Response time	$\leq 500 \mu s$
Repeatability (response time)	$150 \mu s$

A switching frequency of 1000 Hz implies that the sensor can complete 1000 readings in one second. In other words, it can read one complete measurement in one-thousandth of a second.

In the case of a quadcopter like the one intended to use in this work, the speed of the propellers stays in the range of 1000 up to 12000 revolutions per minute. Translating this numbers to revolutions per second, the range becomes 17 to 200 revolutions per second, which fits comfortably in the switching frequency of the sensors chosen.

It must be said that the switching frequency stated in the datasheet is obtained with a light/dark ratio of 1 to 1.

3.0.1 Codes files

In this project, there are several arduino files that collect data from this sensor according to the connection established. Eventhough the sensors are purely digital, the analog alternative was also tested.

The digital connection and function of 1 up to 4 sensors can be tested with the codes in the Arduino folder (tachometer_nsensor), with n the number of sensors willing to be connected.

tachometer_1sensor.ino is a script for only one sensor and uses a timer to count the time that passes in between sensor interrupts. For more information on microcontroller timers and sensor interrupts, see subsection 3.1. The same approach has been used for *tachometer_2sensor.ino*, showing that the timer system is not the best choice when dealing with more than one sensor.

tachometer_3sensor.ino and *tachometer_4sensor.ino* deal with three and four sensors, respectively by using only interrupts on three and four pins of the arduino Mega. This way, a delay is introduced for the counters to measure the sensor occurrences and once the delay is over, the elapsed time and counts are used to compute the RPM.

3.1 On Timers and interrupts

Arduino Mega2650 R3 contains an ATMEGA2650 microcontroller, and a 16 MHz oscillator.

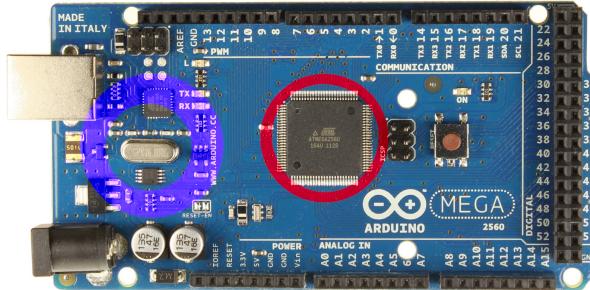


Figure 8: Arduino mega2650, the oscillator is in the blue circle and the microcontroller is in the red one

Waveform Generation mode or WGMn3:0 bits located in the Timer/Control registers A and B. (from page 139 of the manual) determines the counting sequence. When setting TCCR1A and TCCR1B

to 0, we are choosing the *normal* mode, in which the counting direction is always incremented and no counter clear is implemented. The counter simply overruns when passes its maximum 16-bit value and then restarts from the bottom. In the case of a 16 bit counter, we have the following:

$$Steps = 2^{16\text{bits}} = 65536 \quad (3)$$

The oscillator of the board can process 16000000 steps in one second, so our counter runs into an overflow every:

$$\frac{65536\text{steps}}{16e10^6 \frac{\text{steps}}{\text{second}}} \approx 4ms \quad (4)$$

The following figure represents the counter behavior with a waveform generator in normal mode and a prescaler of 1.

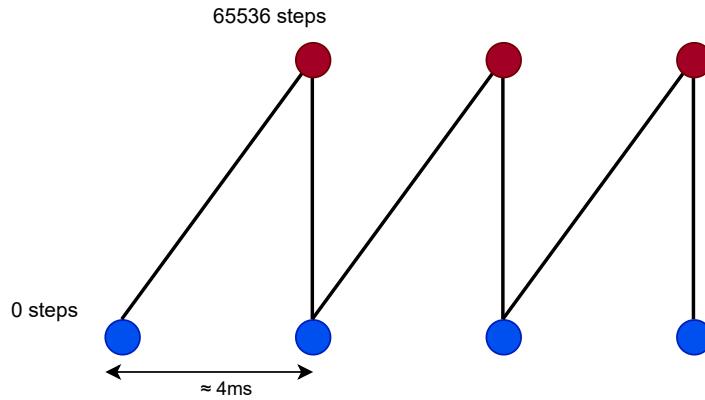


Figure 9: Counter overflow process

A prescaler is a number used to control the overflow frequency of a counter. If the prescaler is set to 1, this means that the equation above is going to rule out counter overflow.

We can enable the counter overflow interrupt by setting the TOIE1 bit to 1. This allows us to construct an interrupt that is triggered every time the counter overflows. The prescaler of timer 1 (CS1n with n from 0 to 2) acts as follows:

$$\frac{65536[\text{steps}]}{16 \cdot 10^6 / \text{prescaler}[\frac{\text{steps}}{\text{second}}]} \quad (5)$$

The table with values of the prescaler and the bits to be set is the following:

CSn2	CSn1	CSn0	Description
0	0	0	No clock source. (Timer/Counter stopped)
0	0	1	clk _{I/O} /1 (No prescaling)
0	1	0	clk _{I/O} /8 (From prescaler)
0	1	1	clk _{I/O} /64 (From prescaler)
1	0	0	clk _{I/O} /256 (From prescaler)
1	0	1	clk _{I/O} /1024 (From prescaler)
1	1	0	External clock source on Tn pin. Clock on falling edge
1	1	1	External clock source on Tn pin. Clock on rising edge

Figure 10: Clock select bit description

This means that the minimum interrupt frequency we can obtain with a 16-bit counter is around 4 milliseconds.

There's other two ways of controlling counter overflow frequency:

- Start the counter at a different value than 0. Refer to Equation 6 to figure out how to compute the starting point
- Use clear timer on compare match. This mode can be activated by setting WGM12 to 1. It allows the user to manipulate the counter resolution by comparing the counter value to a pre-established value.

$$Start = 65536 - \frac{f_{clock}}{\text{Prescaler} \cdot f_{target}} \quad (6)$$

In the case of building a tachometer with a digital sensor, this video has been used as inspiration, changing the value of the oscillator.

In our case, using a prescaler of 256 allows us to reduce the counter maximum to 62500 (from 2^{16} to $2^{16}/256$). In this case, the time it takes for one revolution to complete can be described as:

$$\frac{\text{counter}[\frac{\text{steps}}{1\text{rotation}}]}{62500[\frac{\text{steps}}{1\text{second}}]} \quad (7)$$

To obtain the RPM value:

$$\frac{60\text{seconds}}{1\text{minute}} \cdot \frac{62500[\frac{\text{steps}}{1\text{second}}]}{\text{counter}[\frac{\text{steps}}{1\text{rotation}}]} \quad (8)$$

Depending on the value of the counter when entering the interrupt we can get a hypothetical maximum of 3750000 RPM and a minimum of 57 RPM.

3.2 On only interrupt based algorithms (FINAL CHOICE)

In the end, the use of timers to control 4 tachometers is becoming a very tedious task and readings are not correct. The final solution that was adopted is the use of four interrupts attached to the interrupt enabled pins of the arduino Mega 2650 R3 (2, 3, 18, 19, 20, 21 (pins 20 & 21 are not available to use for interrupts while they are used for I2C communication)). Increasing four counters and computing the rpm every loop iteration allows the control of the resolution and maximum and minimum values to be captured with the sensors.

The algorithm is as follows:

The resolution of the readings depends on the product of $60000 \frac{\text{ms}}{1\text{min}} \times \frac{1}{t_{elapsed}}$. Depending on the delay imposed, the resolution will change. Also, the minimum and maximum values to be read will be different.

The Arduino counters have been defined as *volatile*[2] floats, which is directing the compiler to load the variable from RAM and not from a storage register. Values stored in registers can be inaccurate under certain conditions. Variables such as counters inside interrupts are being changed by something beyond the control of the code section (setup or loop code). Declaring them as *volatile*, the changes in them are immediately visible in the *loop()* function. If not, the variable state might be loaded into a register when entering the function and would not be updated anymore until the function ends. Declaring a variable *volatile* is a directive to the compiler.

Algorithm 1 An algorithm with caption

Ensure: Interrupt pins: 2, 3, 18, 19 and Serial communication open

```
delay ← 2000ms
X ← x
N ← n
while Working do
    for t = 0 to t = delay do
        counter1 ++
        counter2 ++
        counter3 ++
        counter4 ++
    end for
    Stop all interrupts
    t ← Update
    rpm1 ← 60000  $\frac{ms}{1min} \times \frac{counter_1}{t_{elapsed}}$ 
    rpm2 ← 60000  $\frac{ms}{1min} \times \frac{counter_2}{t_{elapsed}}$ 
    rpm3 ← 60000  $\frac{ms}{1min} \times \frac{counter_3}{t_{elapsed}}$ 
    rpm4 ← 60000  $\frac{ms}{1min} \times \frac{counter_4}{t_{elapsed}}$ 
    counter1 ← 0
    counter2 ← 0
    counter3 ← 0
    counter4 ← 0
end while
```

4 Castle Phoenix Edge 50A ESC

The manual of these ESC is in the following link.

The programming instructions were followed to obtain the following configuration:

- Settings 1: Option 4. 3.3V per cell
- Settings 2: Option 5. Brake Disabled (Factory Settings)
- Settings 3: Option 3: RPM Decrease
- Settings 4: Option 2: 12 kHz (Factory Settings)

To enter programming mode either follow the instructions on the manual or follow the next steps:

- Unplug your ESC and select full throttle with your transmitter
- Plug your ESC and wait for 5 seconds or so. You will hear a song, two beeps and the same song again. Take your throttle to medium position and wait for the song again.
- Once you've heard the song, go back to full throttle and wait for another confirmation with the same song. Then go back to half throttle.
- If at this point you should hear the song repeat itself four times. Then you have entered programming mode.
- The options will be introduced to you as a first *beep* sequence indicating the setting number and a second *beep* sequence indicating the option number. By moving the throttle to maximum position, we are accepting the option in this setting number. If accepted, the ESC will pass onto the next setting number. If rejected by taking the throttle to the minimum, the ESC will ask about the next option in the same setting number. To let us know that the ESC has understood our command, it will start emitting two beeps at a faster rate. move the throttle stick to middle position to pass onto the next setting/option query.

The ESC connection to the arduino is shown in Figure 11:

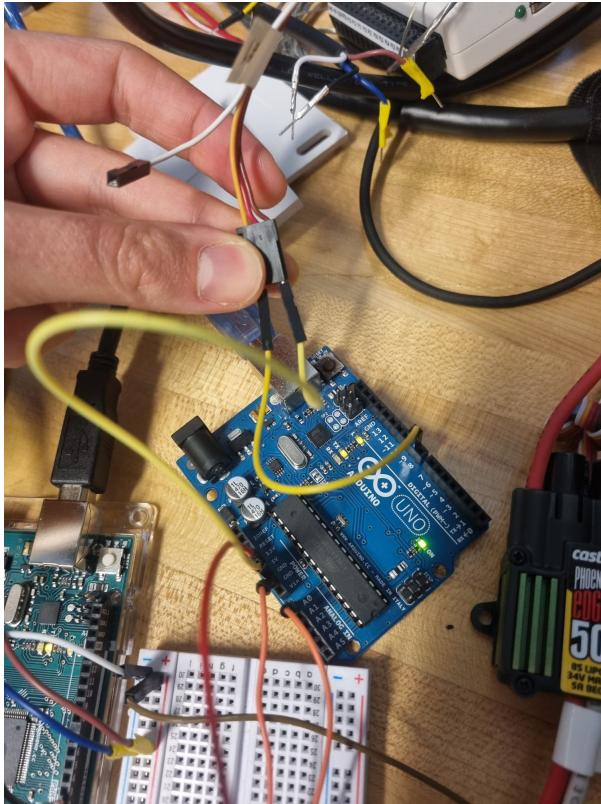


Figure 11: Brown ESC wire connects to GND and orange ESC wire is attached to pin 9 for PWM signal

The rest of the cables are connected to a potentiometer that acts as radio controller.

5 Keysight 34970A connection to PC

The connection is made via a GPIB-USB-HS cable. The GPIB-USB-HS is an IEEE 488 controller device for computers with USB slots. The GPIB-USB-HS achieves maximum IEEE 488.2 performance. The exact model can be found in Amazon. The differences with the original true version of this device are not the scope of this document.

There are various manuals for this DAQ. The most helpful one containing command examples is the Keysight 34970A/34972A Command Reference Manual. From this manual, the information from the following section was found.

5.1 Important commands

ROUT:SCAN : This command selects the channels to be included in the scan list. This command is used in conjunction with the CONFigure commands to set up an automated scan. To start the scan, use the INITiate or READ? command.

INStrument:DMM : This command disables or enables the internal digital multimeter. When you change the state of the internal DMM, the instrument issues a Factory Reset (*RST command).

TRIGger:SOURce : Select the trigger source to control the onset of each sweep through the scan list (a sweep is one pass through the scan list). The instrument will accept a software (bus) command, an immediate (continuous) scan trigger, an external TTL trigger pulse, an alarm-initiated action, or an internally paced timer. Usually used: TIMer = Internally paced timer trigger.

TRIGger:TIMer : This command sets the trigger-to-trigger interval (in seconds) for measurements on the channels in the present scan list. This command defines the time from the start of one trigger

to the start of the next trigger, up to the specified trigger count (see TRIGger:COUNt command). A number from 0 seconds to 359,999 with 1 ms resolution. Note that 359,999 seconds is one second less than one hundred hours.

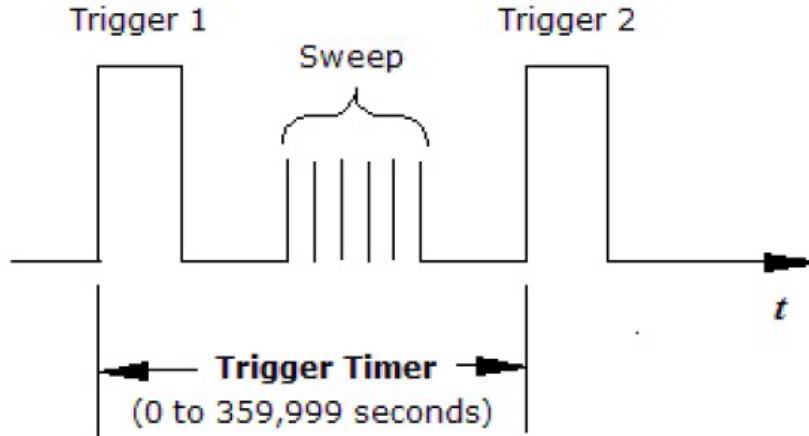


Figure 12: Trigger timer

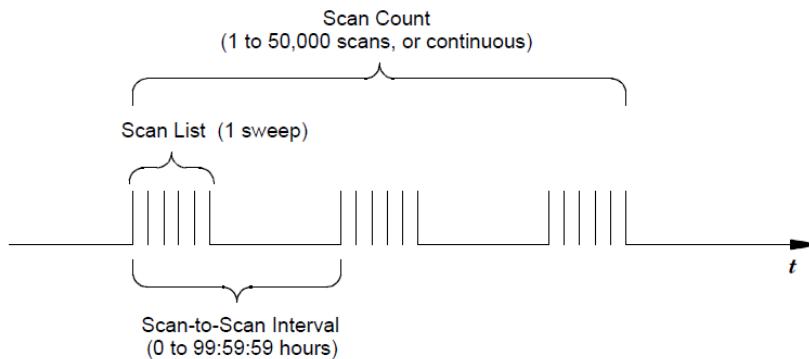


Figure 13: Trigger timer from hewlett packard manual

TRIGger:COUNt: This command specifies the number of times to sweep through the scan list. A sweep is one pass through the scan list. The scan stops when the number of specified sweeps has occurred. An integer from 1 to 50,000 triggers, or continuous (INFinity).

INITiate : This command changes the state of the triggering system from the “idle” state to the “wait-for-trigger” state. Scanning will begin when the specified trigger conditions are satisfied following the receipt of the INITiate command. Readings are stored in the instrument’s internal reading memory. Note that the INITiate command also clears the previous set of readings from memory. If a scan list is currently defined (see ROUTe:SCAN command), the INITiate command performs a scan of the specified channels. Storing readings in memory using the INITiate command is generally faster than sending readings to memory using the READ? command. The INITiate command is also an ”overlapped” command. This means that after executing the INITiate command, you can send other commands that do not affect the measurements. You can store up to 50,000 readings in memory and all readings are automatically time stamped. If memory overflows, the new readings will overwrite the first (oldest) readings stored; the most recent readings are always preserved. For scanning measurements using the multiplexer modules, an error is generated if the internal DMM is disabled. To retrieve the readings from memory, use the FETCh? command. The readings are not erased from memory when you read

them. You can send the command multiple times to retrieve the same data in reading memory.

FETCh: This command transfers readings stored in non-volatile memory to the instrument's output buffer, where you can read them into your computer. The readings stored in memory are not erased when you read them with FETCh?.

VOLT:DC:APERTURE : This command enables the aperture mode and sets the integration time in seconds (called aperture time) for DC voltage measurements on the specified channels.

6 LabView

For LabView, a calibration file has to be loaded inside the VI. Use the file FT17838.cal and choose desired units. May not work well when using single-ended connection. In that case, use the matrices provided in ATImatrices.m under the MATLAB/Scripts folder.

6.1 Keysight 34970A

LabView offers two main ways of interacting with the Keysight 34970A DAQ:

- General purpose Virtual Instrument Software Architecture (VISA) blocks.NI-VISA is an API that provides a programming interface to control Ethernet/LXI, GPIB, serial, USB, PXI, and VXI instruments in NI application development environments like LabVIEW, LabWindows/CVI, and Measurement Studio. The API is installed through the NI-VISA driver [3].
- Agilent Technologies / Keysight Technologies 34970A drivers. These block are based on the VISA blocks but offer a more user-friendly approach to configuring the instrument as well as reading data from it.

The example provided in this repository uses generic VISA blocks. In Figure 14, the block diagram of the VI can be seen:

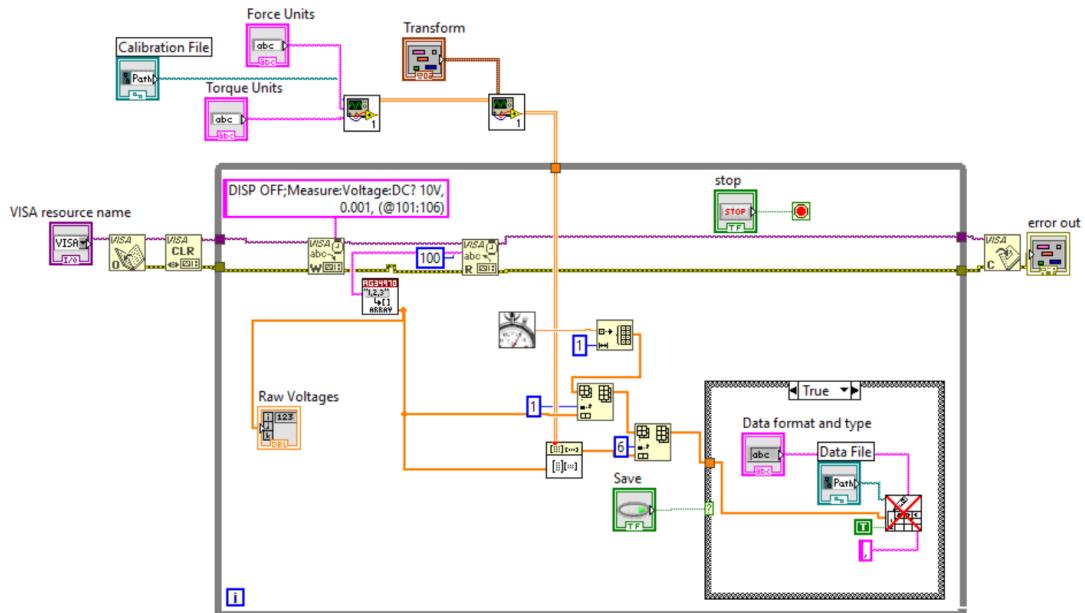


Figure 14: LabView block diagram

Inside the while loop, the write and read blocks are interacting with the instrument. Every iteration, the *write* block sends the following commands to the DAQ:

- DISP OFF: This command turns off the display of the external instrument. This speeds up the sampling process.

- MEASure:VOLTage:DC? 10V, 0.001, (@101:106): The first part of the command 'MEASure:VOLTage:DC?' is requesting the measurement of the voltage. The question mark indicates a query command. The two numbers following such query are the *range* and the *resolution*, respectively. There are alternative values for these parameters. See more in pages 211 to 217 from the manual.

6.2 NI USB 6008

Using the VI provided by the DAQ software download page from ATI.

7 Python

Using Qt creator, a base interface was created to interact with all python codes (see Figure 18). Since the final choice for the DAQ was the NI USB 6008, the interface has been adapted to the configuration parameters of this specific device.

There are several ways of creating a multi-channel analog reading software using Qt and the NI-DAQmx python libraries [4]:

- **NI Callback functions:**
- **QTimers** ← used in this project for ATI Mini40 and NI USB 6008 DAQ.
- **Python Threads :**

Please, visit ENGedu for fantastic code examples and references using these methods.

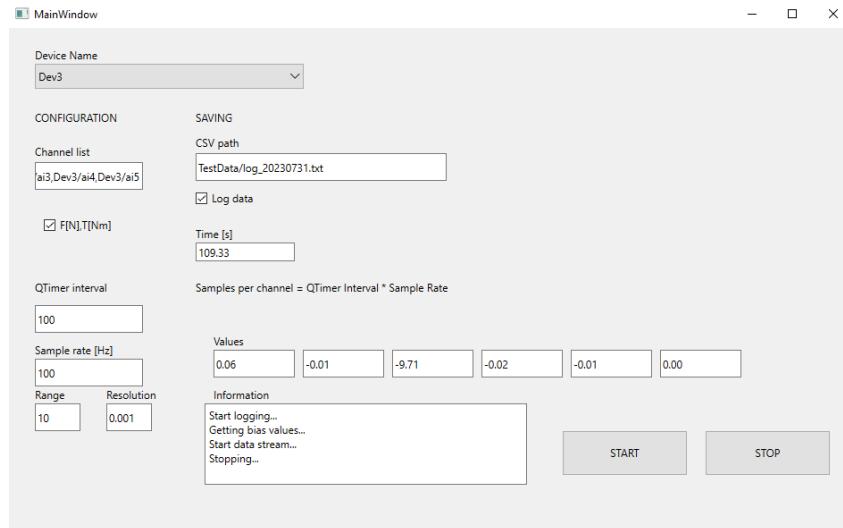



Figure 15: Qt interface for NI USB 6008 Data Acquisition Unit

7.1 Keysight 34790A


Using PyVisa python libraries.

7.2 NI USB 6008 DAQ

Using NI-DAQmx python libraries.

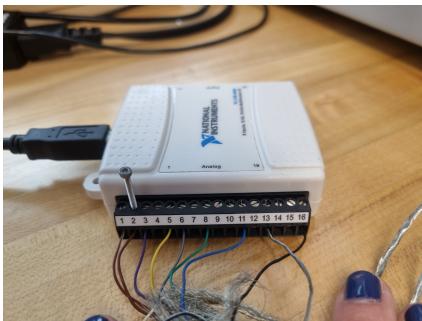

(a) Single-ended connection with only brown-white reference cable grounded

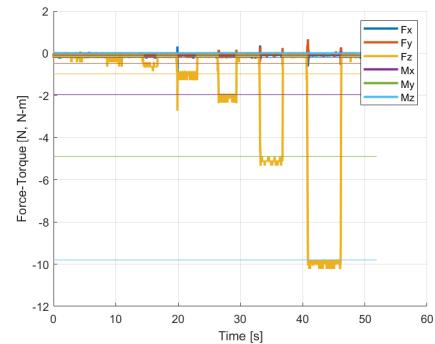


(b) Fz test check

Figure 16: Single-ended connection results with non-connected references



(a) Single-ended connection with all reference cables grounded

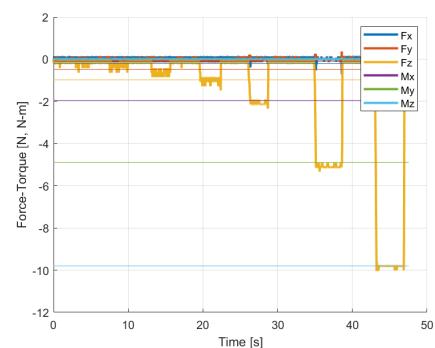

(b) Fz test check

Figure 17: Single-ended connection results with grounded references

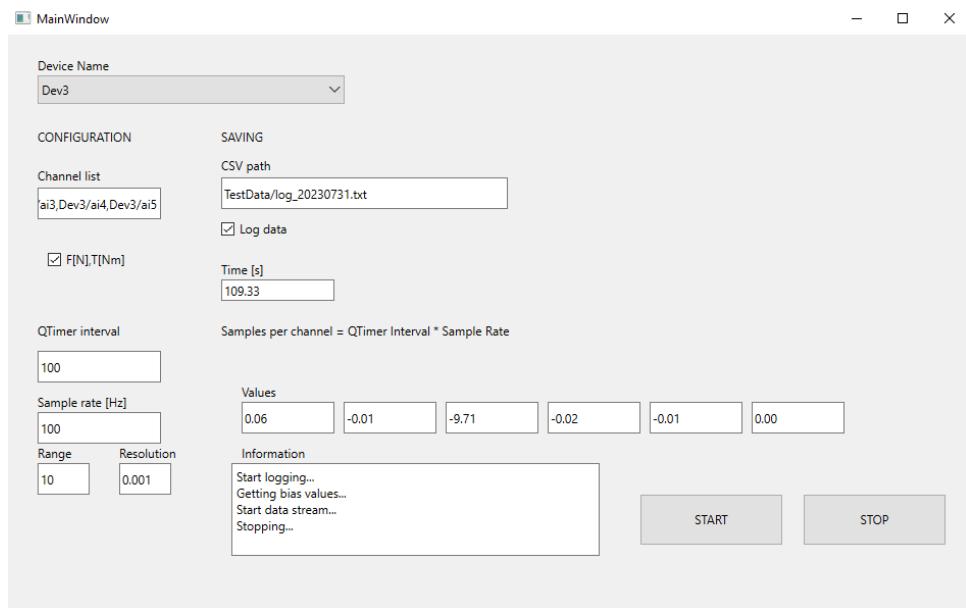


Figure 18: Qt GUI for NI USB 6008




Figure 19: A graph of the overall system, representing all devices and the connections between them

8 The final architecture

8.1 Data collection procedure

9 Resources

Keysight 34970A/34972A Command Reference Manual

References

- [1] M. Scanavino, A. Avi, A. Vilardi, and G. Guglieri, “Unmanned aircraft systems performance in a climate-controlled laboratory,” *Journal of Intelligent and Robotic Systems: Theory and Applications*, vol. 102, 5 2021.
- [2] “volatile - arduino reference.” [Online]. Available: <https://www.arduino.cc/reference/en/language/variables/variable-scope-qualifiers/volatile/>
- [3] “Ni-visa overview - ni.” [Online]. Available: <https://www.ni.com/en/support/documentation/supplemental/06/ni-visa-overview.html>
- [4] “Ni acquisition strategies – engr edu.” [Online]. Available: <http://engredu.com/2023/07/29/ni-acquisition-strategies/>